



### BG4500/5000

No.	Parts No.	Parts Name	No.	Parts No.	Parts Name	No.	Parts No.	Parts Name	No.	Parts No.	Parts Name
1	6J312101	Drag Knob	19	6G685401	Washer (D)	38	6J309101	Roller Clutch	57	6H243301	Collar (G)
2	6F884001	Drag Washer Retainer	20	6H503301	Bail Spring Shaft (A)	39	6J309002	Spacing Sleeve	58	6H243201	Anti-Reverse Pawl
3	6J313601	Drag Washer	21	6J322001	Bail Spring Holder	40	6J001602	Screw (F)	59	63516401	Screw (I)
4	6H175101	Key Washer	22	6J321901	Bail Spring (B)	41	6J308401	Bearing Retainer (A)	60	6J308601	Spring
5	6G700701	Eared Washer	23	6J321801	Washer (E)	42	6G426301	Ball Bearing (B)	61	6J321201	O Ring (A)
6	6B358607	Ball Bearing (A)	24	6J321701	Bail Spring Shaft (B)	43	6G613404	Washer (G)	46+62	6Z023041	Pinion Gear + Drive
2-7	6J322801	Spool Assembly(5000)	25	6H945501	Collar (B)	44	6E262701	Ratchet	63	63712800	Washer (H)
2-7	6J344801	Spool Assembly(4500)	26	6J309703	Bail arm	45	6G613404	Washer (G)	64	6G522802	Ball Bearing (E)
8	6F050100	Washer (A)	27	6G455601	Screw (B)	46+62	6Z023041	Pinion Gear + Drive Gear	65	6J321301	Side Cover
9	6F050002	Washer (B)	28	6J322101	Cover (A)	47	6G522702	Ball Bearing (C)	66	6J423501	Washer (J)
10	6H309501	Click Leaf Spring Holder	29	6G270801	Screw (C)	48	6J320901	Collar (F)	67	63516417	Screw (J)
11	6B747701	Spool Click Leaf Spring	30	6J323301	Bail Assembly	49	6J319801	Body	68	6G522802	Ball Bearing (F)
12	6F049901	Washer (C)	31	6J416001	Collar (C)	50	6J320501	Main Shaft	69	6H047201	Bearing Retainer (E)
13	6G270801	Screw (A)	32	6H246103	Line Roller	51	6J320801	Stabilizer Bar	70	6J042501	O Ring (B)
14	6J322501	Collar (A)	33	6J310401	Collar (D)	52	6J321501	Rear Cover	71	6J394902	Handle Screw Cap
15	6J322401	Rotor Nut	34	6F608901	Screw (D)	53	6J001801	Screw (G)	72	6J416501	Handle Assembly
16	6G392202	Rotor Nut Plate	35	6J309301	Washer (F)	54	6J320401	Oscillating Gear	73	6G578501	Washer (K)
17	6J321601	Rotor	36	6J001601	Screw (E)	55	6G467105	Ball Bearing (D)			
18	6H503401	Bail Spring (A)	37	6J323901	Cover (B)	56	6H272201	Screw (H)			

### BG6500/8000

No.	Parts No.	Parts Name	No.	Parts No.	Parts Name	No.	Parts No.	Parts Name	No.	Parts No.	Parts Name
1	6J312101	Drag Knob	19	6E272501	Washer (D)	38	6J309101	Roller Clutch	57	6H243301	Collar (G)
2	6F884001	Drag Washer Retainer	20	6H684601	Bail Spring Shaft (A)	39	6J309002	Spacing Sleeve	58	6H339401	Anti-Reverse Pawl
3	6J313601	Drag Washer	21	6H684701	Bail Spring Holder	40	6J001601	Screw (F)	59	63516401	Screw (I)
4	6H175101	Key Washer	22	6G418101	Bail Spring (B)	41	6J308401	Bearing Retainer (A)	60	6J308601	Spring
5	6G700701	Eared Washer	23	6J309601	Washer (E)	42	6G426301	Ball Bearing (B)	61	6J308501	O Ring (A)
6	6B358607	Ball Bearing (A)	24	6J309501	Bail Spring Shaft (B)	43	6H243901	Collar (E)	46+62	6Z022625	Pinion Gear + Drive
2-7	6J311701	Spool Assembly(8000)	25	6H945501	Collar (B)	44	6E262701	Ratchet	63	63712800	Washer (H)
2-7	6J338601	Spool Assembly(6500)	26	6J309703	Bail arm	45	6E339701	Washer (G)	64	6G522802	Ball Bearing (E)
8	6F050100	Washer (A)	27	6G455601	Screw (B)	46+62	6Z022625	Pinion Gear + Drive Gear	65	6J308701	Side Cover
9	6F050002	Washer (B)	28	6J309801	Cover (A)	47	6B861704	Ball Bearing (C)	66	6J423501	Washer (J)
10	6H323701	Click Leaf Spring Holder	29	6G270801	Screw (C)	48	6J308101	Collar (F)	67	63516417	Screw (J)
11	6G341401	Spool Click Leaf Spring	30	6J309901	Bail Assembly	49	6J307001	Body	68	6G522802	Ball Bearing (F)
12	6F049901	Washer (C)	31	6J416001	Collar (C)	50	6J307701	Main Shaft	69	6H047201	Bearing Retainer (E)
13	6G270801	Screw (A)	32	6H246103	Line Roller	51	6J308001	Stabilizer Bar	70	6J042501	O Ring (B)
14	6J310601	Collar (A)	33	6J310401	Collar (D)	52	6J308901	Rear Cover	71	6J394902	Handle Screw Cap
15	6J310501	Rotor Nut	34	6F608901	Screw (D)	53	6J001801	Screw (G)	72	6J416101	Handle Assembly
16	6J316501	Rotor Nut Plate	35	6J309301	Washer (F)	54	6J307601	Oscillating Gear			
17	6J309401	Rotor	36	6J001601	Screw (E)	55	6B861704	Ball Bearing (D)			
18	6H782801	Bail Spring (A)	37	6J309201	Cover (B)	56	6H347101	Screw (H)			