




SPINNING REEL

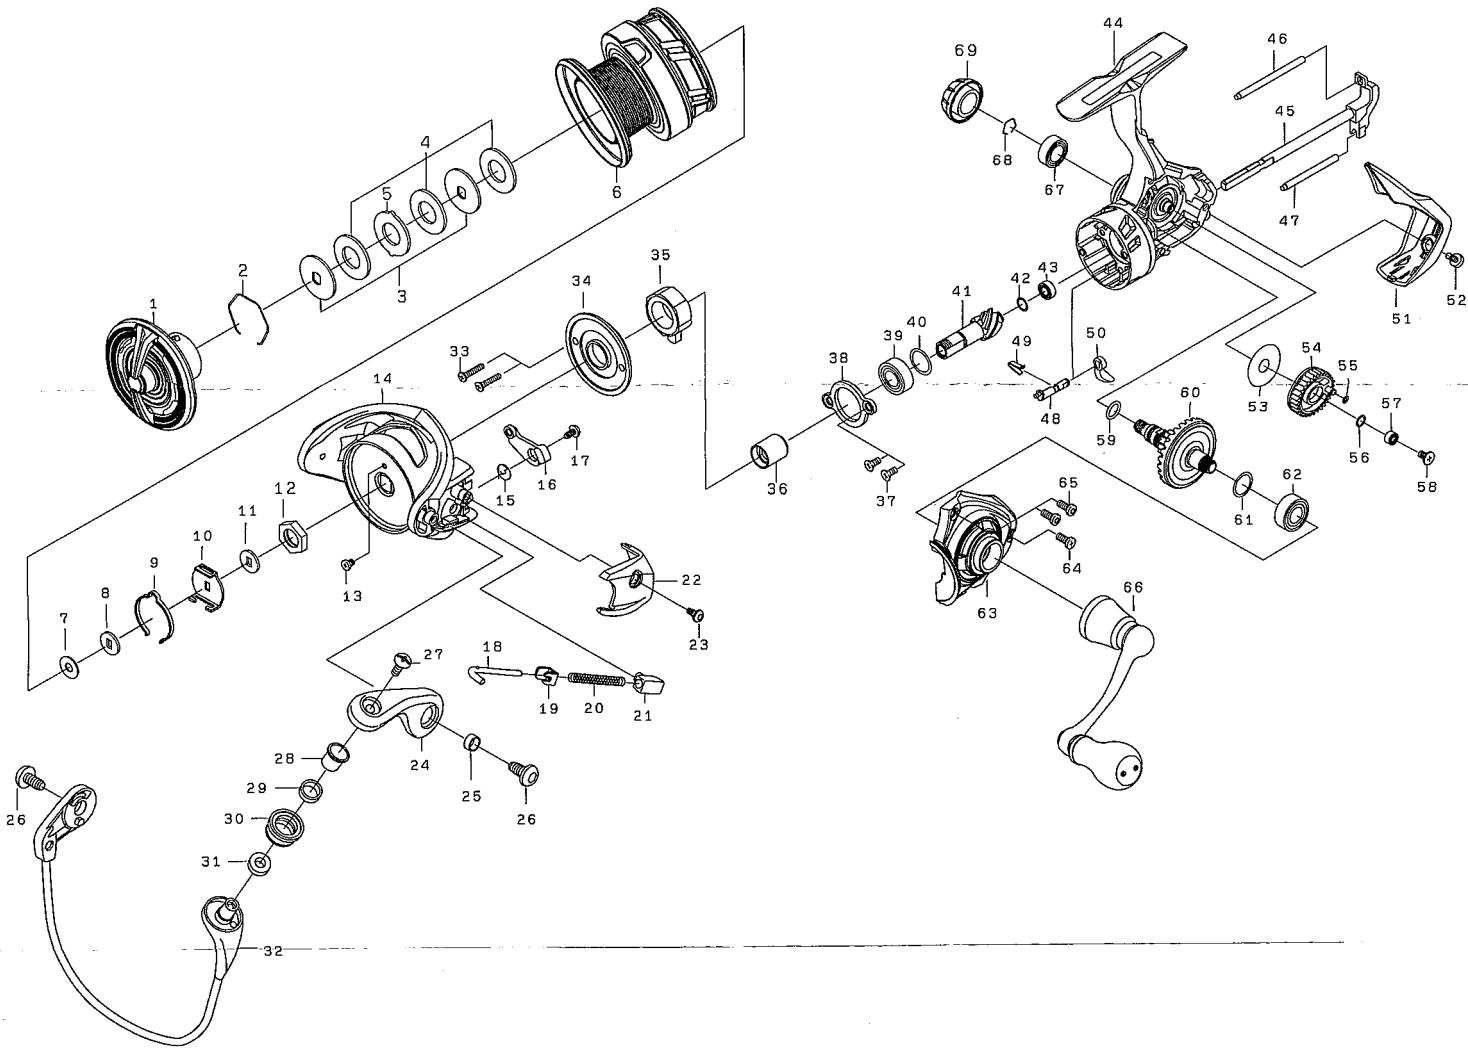

EMERALDAS X LT 2500S-H/3000S-H

*Please order by parts number, not key number.

Key No.	Parts Name	Parts No.		Key No.	Parts Name	Parts No.	
		2500S-H	3000S-H			2500S-H	3000S-H
1	Drag Knob	6Q424401	6Q424401	36	Spacing Sleeve	6J001403	6J001403
2	Drag Washer Retainer	6Q346101	6Q346101	37	Screw (G)	6Q126201	6Q126201
3	Key Washer	6J547001	6J547001	38	Bearing Retainer (A)	6Q195601	6Q195601
4	Drag Washer	6J546801	6J546801	39	Ball Bearing (A)	6G467305	6G535105
5	Eared Washer	---	6Q346001	40	Washer (D)	63758500	63758500
2-6	Spool Assembly	6Q672601	6Q673201	41	Pinion Gear	6Q243501	6Q245001
7	Washer (A)	6E398000	6E398000	42	Spring Washer	6H931701	6H931701
8	Washer (B)	6Q348502	6Q348502	43	Ball Bearing (B)	6H959601	6G466202
9	Spool Click Leaf Spring	6H416101	6H416101	44	Body	6Q672401	6Q673001
10	Click Leaf Spring Holder	6M021401	6M021401	45	Main Shaft	6Q341501	6Q381701
11	Washer (C)	6Q344001	6Q344001	46	Stabilizer Bar (A)	6Q126301	6Q126302
12	Rotor Nut	6Q122401	6Q122401	47	Stabilizer Bar (B)	6Q119101	6Q119102
13	Screw (A)	6H022701	6H022701	48	Anti-Reverse Cam	6Q118101	6Q118101
14	Rotor	6Q343004	6Q120516	49	Anti-Reverse Cam Spring	6H697801	6H697801
15	Bail Trip Lever Spring	6H413601	6H413601	50	Anti-Reverse Lever	6Q118001	6Q118001
16	Bail Trip Lever	6Q343101	6Q120701	51	Rear Cover	6Q342802	6Q351703
17	Screw (B)	6H417701	6H417701	52	Screw (H)	6Q342901	6Q342901
18	Bail Spring Shaft	6Q343301	6Q121201	53	Washer (E)	6H595701	6H595701
19	Bail Spring Plate	6H576101	6H576101	54	Oscillate Gear	6Q139001	6Q381601
20	Bail Spring	6J642801	6H545701	55	"O"-Ring (A)	6H770601	6G466001
21	Bail Spring Holder	6Q121501	6Q121501	56	Washer (F)	6H129200	6H129200
22	Cover (A)	6Q343502	6Q121802	57	Ball Bearing (C)	6G469007	6G469007
23	Screw (C)	6Q342901	6Q342901	58	Screw (I)	6Q126101	6Q126101
24	Bail Arm	6Q121609	6Q121609	59	"O"-Ring (B)	6G670501	6G670501
25	Collar (A)	6Q121701	6Q121701	60	Drive Gear	6Q523301	6Q655001
26	Screw (D)	6Q343401	6Q343401	61	Washer (G)	63758500	63758500
27	Screw (E)	6G195602	6G195602	62	Ball Bearing (D)	6G467305	6G467305
28	Collar (B)	6G195501	6G195501	63	Side Cover	6Q672501	6Q673101
29	Collar (C)	6G220701	6G220701	64	Screw (J)	6Q342701	6Q342701
30	Line Roller	6J089901	6J089901	65	Screw (K)	6Q342601	6Q342601
31	Collar (D)	6Q203401	6Q203401	66	Handle Assembly	6Q672801	6Q672801
32	Bail Assembly	6Q522601	6Q281001	67	Ball Bearing (E)	6G522705	6G522705
33	Screw (F)	6G837101	6G837101	68	Bearing Retainer (B)	6G472401	6G472401
34	Cap	6Q139401	6Q129001	69	Handle Screw	6Q345103	6Q345103
35	Roller Clutch	6J388401	6J388401				