


Parts List

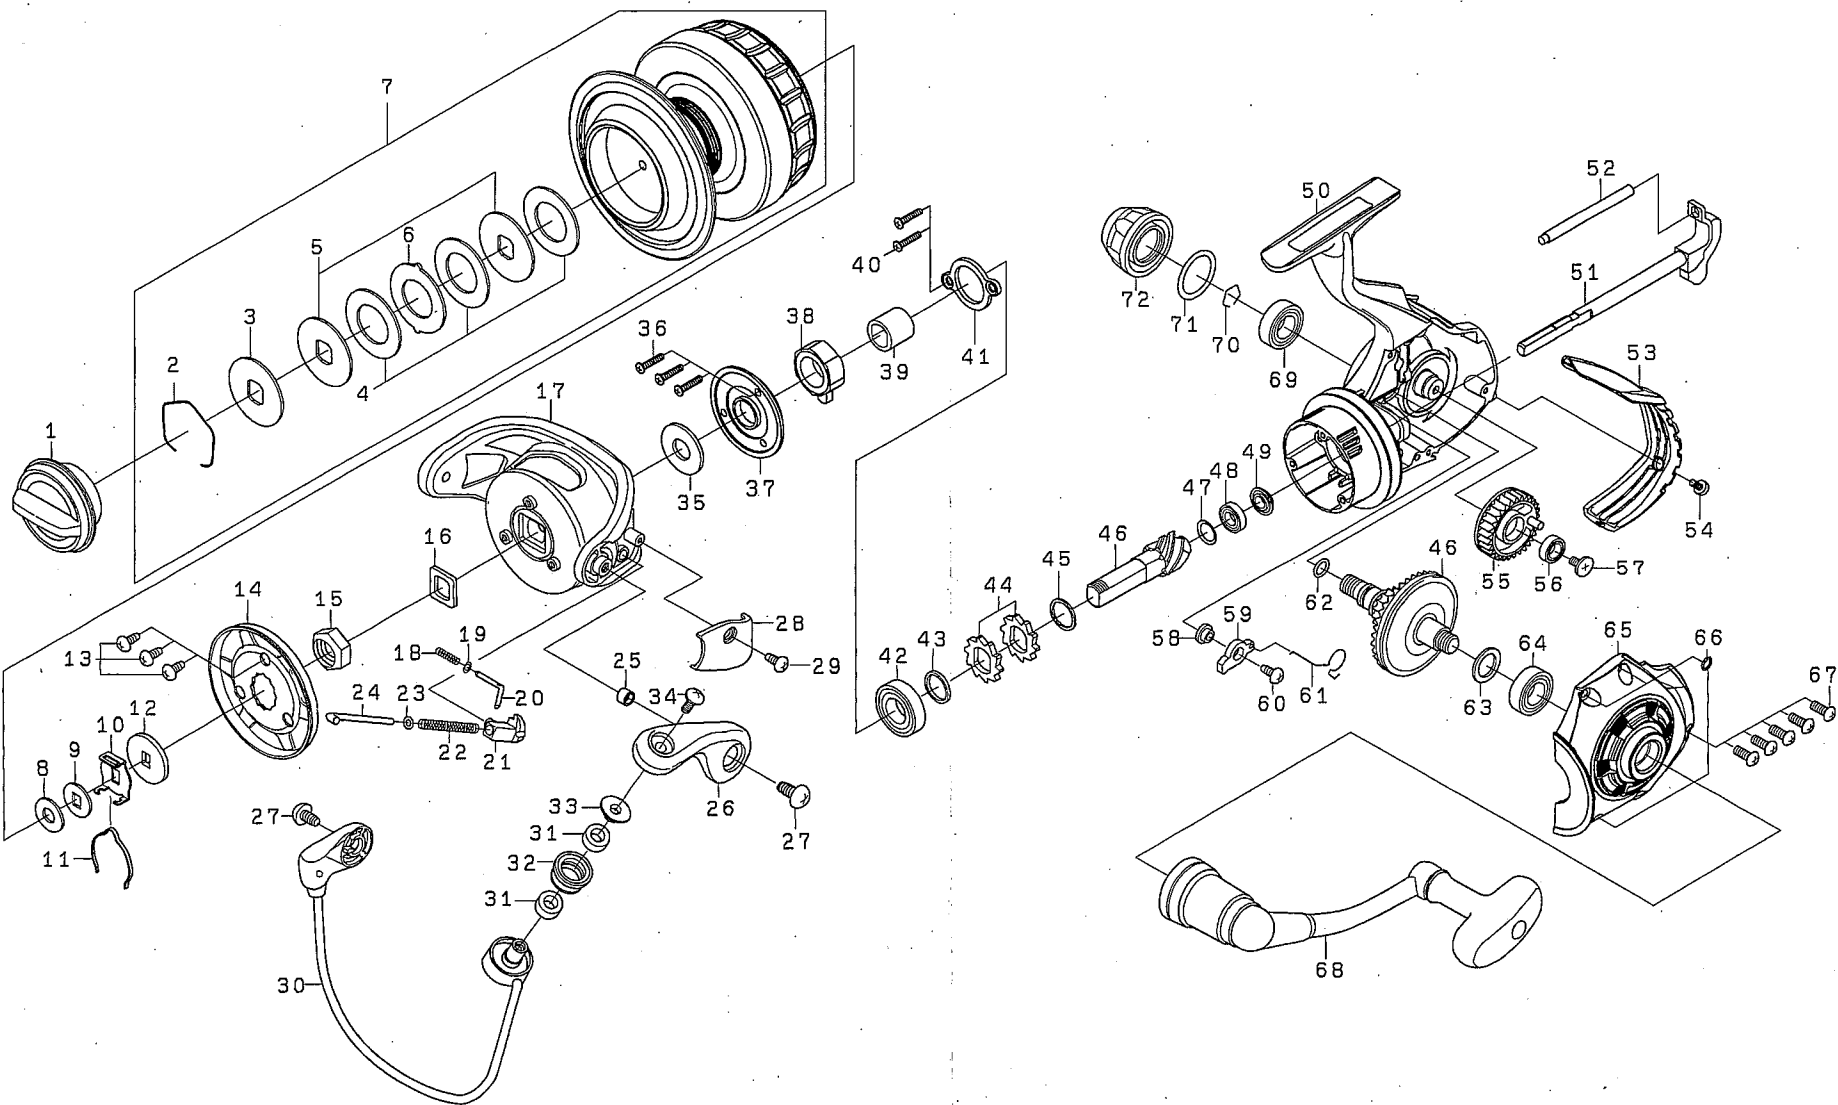

BG BLACK LT 8000-P/8000-H/10000-P/10000-H

*Please order by parts number, not key number.

Key No.	Parts Name	Parts No.			
		8000-P	8000-H	10000-P	10000-H
1	Drag Knob	6M280201	6M280201	6M280201	6M280201
2	Drag Washer Retainer	6F884001	6F884001	6F884001	6F884001
3	Washer(A)	6H380901	6H380901	6H380901	6H380901
4	Drag Washer	6J313601	6J313601	6J313601	6J313601
5	Key Washer	6H175101	6H175101	6H175101	6H175101
6	Eared Wahser	6G700701	6G700701	6G700701	6G700701
7	Spool Assembly	6M250201	6M250401	6M211301	6M211701
8	Washer(B)	6F050100	6F050100	6F050100	6F050100
9	Washer(C)	6F050002	6F050002	6F050002	6F050002
10	Click Leaf Spring Holder	6H309501	6H309501	6H309501	6H309501
11	Spool Click Leaf Spring	6B747701	6B747701	6B747701	6B747701
12	Washer(D)	6F049901	6F049901	6F049901	6F049901
13	Screw(A)	6G270801	6G270801	6G270801	6G270801
14	Collar(A)	6J322501	6J322501	6J322501	6J322501
15	Rotor Nut	6J322401	6J322401	6J322401	6J322401
16	Rotor Nut Plate	6G392202	6G392202	6G392202	6G392202
17	Rotor	6J321601	6J321601	6J321601	6J321601
18	Bail Spring(A)	6H503401	6H503401	6H503401	6H503401
19	Washer(E)	6G685401	6G685401	6G685401	6G685401
20	Bail Spring Shaft(A)	6H503301	6H503301	6H503301	6H503301
21	Bail Spring Holder	6J322001	6J322001	6J322001	6J322001
22	Bail Spring(B)	6J321901	6J321901	6J321901	6J321901
23	Washer(F)	6J321801	6J321801	6J321801	6J321801
24	Bail Spring Shaft(B)	6J321701	6J321701	6J321701	6J321701
25	Collar(B)	6H945501	6H945501	6H945501	6H945501
26	Bail Arm	6J309703	6J309703	6J309703	6J309703
27	Screw(B)	6G455601	6G455601	6G455601	6G455601
28	Cover	6J322101	6J322101	6J322101	6J322101
29	Screw(C)	6G270801	6G270801	6G270801	6G270801
30	Bail Assembly	6J323301	6J323301	6J323301	6J323301
31	Bearing	6J416001	6J416001	6J416001	6J416001
32	Line Roller	6H246103	6H246103	6H246103	6H246103
33	Collar(C)	6J310401	6J310401	6J310401	6J310401
34	Screw(D)	6F608901	6F608901	6F608901	6F608901
35	Washer(G)	6J309301	6J309301	6J309301	6J309301
36	Screw(E)	6J001601	6J001601	6J001601	6J001601

Key No.	Parts Name	Parts No.			
		8000-P	8000-H	10000-P	10000-H
37	Body Cap	6J323901	6J323901	6J323901	6J323901
38	Spacing Sleeve	6J309101	6J309101	6J309101	6J309101
39	Roller Clutch	6J309002	6J309002	6J309002	6J309002
40	Screw(F)	6J001602	6J001602	6J001602	6J001602
41	Bearing Retainer(A)	6J308401	6J308401	6J308401	6J308401
42	Ball Bearing(A)	6G426301	6G426301	6G426301	6G426301
43	Washer(H)	6G613404	6G613404	6G613404	6G613404
44	Ratchet	6E262701	6E262701	6E262701	6E262701
45	Washer(I)	6G613404	6G613404	6G613404	6G613404
46	Pinion Gear + Drive Gear	6Z023054	6Z023041	6Z023054	6Z023041
47	Spring Washer(A)	6G578501	6G578501	6G578501	6G578501
48	Ball Bearing(B)	6G522706	6G522706	6G522706	6G522706
49	Collar(D)	6J320901	6J320901	6J320901	6J320901
50	Body	6M210901	6M210901	6M210901	6M210901
51	Main Shaft	6J320501	6J320501	6J320501	6J320501
52	Stabilizer Bar	6J320801	6J320801	6J320801	6J320801
53	Rear Cover	6J321505	6J321505	6J321505	6J321505
54	Screw(G)	6J001801	6J001801	6J001801	6J001801
55	Oscillating Gear	6J320401	6J320401	6J320401	6J320401
56	Ball Bearing(C)	6G467105	6G467105	6G467105	6G467105
57	Screw(H)	6H272201	6H272201	6H272201	6H272201
58	Collar(E)	6H243301	6H243301	6H243301	6H243301
59	Anti-Reverse Pawl	6H243201	6H243201	6H243201	6H243201
60	Screw(I)	63516401	63516401	63516401	63516401
61	Spring	6J308601	6J308601	6J308601	6J308601
62	"O" Ring(A)	6J321201	6J321201	6J321201	6J321201
63	Washer(J)	63712800	63712800	63712800	63712800
64	Ball Bearing(D)	6G522802	6G522802	6G522802	6G522802
65	Side Cover	6M211101	6M211101	6M211101	6M211101
66	Spring Washer(B)	6J423501	6J423501	6J423501	6J423501
67	Screw(J)	63516417	63516417	63516417	63516417
68	Handle Assembly	6M211201	6M211201	6M211201	6M211201
69	Ball Bearing(E)	6G522802	6G522802	6G522802	6G522802
70	Bearing Retainer(B)	6H047201	6H047201	6H047201	6H047201
71	"O" Ring(B)	6J042501	6J042501	6J042501	6J042501
72	Handle Screw	6J394902	6J394902	6J394902	6J394902