



Daiwa Corporation
 11137 Warland Drive
 Cypress, CA, 90630, U.S.A.,
 Phone: +1 562 375 6800
 www.daiwa.com

Daiwa (Australia) Pty.Ltd.
 Unit K, 134-140 Old Pittwater Road,
 Brookvale,
 NSW 2100, Australia,
 Phone: +61 2 8644 8644
 www.daiwafishing.com.au

Daiwa Sports Ltd.
 Netherton Industrial Estate,
 Wishaw, ML2 0EY,
 Lanarkshire, Scotland, U.K.
 Phone: +44 1698 355723
 www.daiwasports.co.uk

Daiwa France S.A.S.
 B.P. 30208, 76304 Sotteville-Les-
 Rouen, France,
 Phone: +33 2 32 91 96 50
 www.daiwa-france.fr

Daiwa Cormoran Sportartikel-Vertrieb GmbH
 Industriestr 28, D-82194, Grobenzell,
 Germany
 Phone: +49 8142 5005 00
 www.daiwa-cormoran.de

Daiwa Italy S.r.l.
 Via Polesine 13 20139
 Milano, Italy
 Phone: +39 02 8725 0585
 www.daiwaitaly.it

Daiwa Rus LLC
 Rusakovskaya Street, 13, Office 0202,
 BC Borodino
 Plaza, Moscow, 107140, Russian Federation
 www.daiwarus.com

Bei kräftigen Wurten kann
 dies kann zu schweren S
 keine Schnur nachrutsch

Es posible que el freno
 el tapón de freno ante

Handle conversion
 Changement de la

As delivered from the factory,
 with the left hand.

Le moulinet est livré d'origine

1. Turn the handle to the right
2. Turn the handle cap to the left

1. Pour retirer la manivelle, la faire
 aiguilles d'une montre) avec la
 2. Pour retirer le capuchon de la
 (dans le sens contraire des aigu

1. Entfernen Sie die Kurbel, indem
 von Hand abschrauben.
 2. Entfernen Sie die Abdeck Kap
 links/gegen den Uhrzeigerst

1. Gire la manija con la mano
 2. Gire la tapa de la manija ha
 antihorario) para quitarla.

3. Remove the water packing at
 4. Remove the "O" ring along w
3. Retirer le joint d'étanchéité de
 4. Retirer la bague « O » en même

3. Entfernen Sie die der Kurbel
 4. Entfernen Sie auch den "O" Ring

3. Retire la junta de estancam
 4. Retire la tapa del pozo y e

5. Re-attach the water packing
 where the handle will be a

5. Remette le joint d'étanchéité

5. Befestigen Sie wieder die V
 Kurbel befestigt wird.
5. Reponga la junta de est
 montada la maneta.

6. Switch the handle and the ha
 7. Turn the handle to the right
 * Make sure to fix the "O" ring

6. Pour intervertir la manivelle et
 7. Faire tourner la manivelle vers l
 Faire tourner le capuchon vers l
 * Ne pas oublier de fixer la bague

6. Befestigen Sie die Kurbel und
 7. Drehen Sie die Kurbel zum Re
 Drehen Sie die Kurbel nach re
 * Vergessen Sie nicht, auch den

6. Sustituir el manija y la tap
 7. Gire la manija hacia la dere
 de la manija hacia la dere
 * Por favor, déjelo a un lado

Printed in CHINA

SALTIST MQ 2500D-H/3000D-XH/4000D-XH

*Please order by parts number, not key number.

Key No.	Parts Name	Parts No.		
		2500D-H	3000D-XH	4000D-XH
1	Drag Knob	6M084601	6M084601	6M037801
2	Drag Washer Retainer	6J547101	6J547101	6J547101
3	Washer (A)	6M037701	6M037701	6M037701
4	Key Washer	6J547001	6J547001	6J547001
5	Drag Washer	6J546803	6J546803	6J546803
6	Eared Washer	6J546902	6J546902	6J546902
7	Line Stopper Plate	6J558101	6J558101	6J558601
8	Line Stopper	6J558001	6J558001	6J558001
9	Line Stopper Spring	6J314801	6J314801	6J314801
10	Spool Assembly	6M173301	6M174101	6M178501
11	Washer (B)	6M037401	6M037401	6M037401
12	Ball Bearing (A)	6G469005	6G469005	6G469005
13	Washer (C)	6B411706	6B411706	6B411706
14	Washer (D)	6E398000	6E398000	6E398000
15	Washer (E)	6E467101	6E467101	6E467101
16	Click Leaf Spring Holder	6M021401	6M021401	6M021401
17	Spool Click Leaf Spring	6H416101	6H416101	6H416101
18	Washer (F)	6J703101	6J703101	6J703101
19	Rotor Nut Packing	6H986901	6H986901	6H986901
20	Rotor Nut	6M181301	6M181301	6M181301
21	Collar (A)	6M402700	6M402700	6M402700
22	Screw (A)	6H022701	6H022701	6H022701
23	Collar (B)	6J538101	6J254307	6J254307
24	Screw (B)	6H022701	6H022701	6H022701
25	Rotor	6J536802	6J254307	6J571903
26	Bail Spring (A)	6J435201	6J435201	6J435201
27	Washer (G)	6J339500	6J339500	6J339500
28	Kick Lever Assembly	6J536901	6J254401	6J572001
29	Screw (C)	6H417701	6H417701	6H417701
30	Bail Spring Shaft (A)	6J254601	6J254601	6J262601
31	Bail Spring Holder	6J254701	6J254701	6J262701
32	Cover (A)	6J537102	6J255101	6J572202

Key No.	Parts Name	Parts No.		
		2500D-H	3000D-XH	4000D-XH
33	Screw (D)	6J255201	6J255201	6J255201
34	Bail Arm	6J254812	6J254812	6J254812
35	Collar (C)	6J254901	6J254901	6J254901
36	Screw (E)	6J255001	6J255001	6J255001
37	Screw (F)	6J257001	6J257001	6J257001
38	Washer (H)	6F897101	6F897101	6F897101
39	Collar (D)	6M162601	6M162601	6M162601
40	Collar (E)	6M162501	6M162501	6M162501
41	Line Roller	6J256502	6J256502	6J256502
42	Bail Assembly	6J890701	6J891101	6J903401
43	Collar (F)	6J254901	6J254901	6J254901
44	Screw (G)	6J255001	6J255001	6J255001
45	Bail Spring Shaft (B)	6G471803	6G471803	6G298201
46	Washer (I)	6G685401	6G685401	6G685401
47	Bail Spring (B)	6M108801	6J255301	6G944501
48	Collar (G)	6G471601	6G471602	6G471602
49	Cover (B)	6J537702	6J255901	6J572702
50	Screw (H)	6J255201	6J255201	6J255201
51	Cap	6J777910	6J777910	6J777910
52	Magsealed Assembly	6J777601	6J777601	6J777601
53	O-ring (A)	6J791001	6J791001	6J791001
54	Collar (H)	6J777802	6J777802	6J777802
55	Washer (J)	6J639900	6J639900	6J639900
56	Roller Clutch	6J388402	6J388402	6J388402
57	Spacing Sleeve	6J536102	6J536102	6J536102
58	Collar (I)	6J536202	6J536202	6J536202
59	Bearing Retainer (A)	6J778201	6J778201	6J778201
60	Screw (I)	6J000901	6J000901	6J000901
61	Ball Bearing (B)	6G467302	6G635104	6G635104
62	Washer (K)	63758500	63758500	63758500
63	Pinion Gear + Drive Gear	6Z025766	6Z025620	6Z025620
64	Washer (L)	6H931701	6H814902	6H814902

Key No.	Parts Name	Parts No.		
		2500D-H	3000D-XH	4000D-XH
65	Washer (M)	---	6E096500	6E096500
66	Ball Bearing (C)	6G466202	6G538007	6G538007
67	Washer (N)	6G466103	---	---
68	Collar (J)	6J387701	6J552001	6J552001
69	Collar (K)	6J022601	6J001101	6J001101
70	Screw (J)	6G940408	6G940408	6G940408
71	Screw (K)	6H531510	6H531510	6H531510
72	Body	6M173001	6M173801	6M178801
73	Main Shaft	6M083201	6M036202	6M036201
74	Stabilizer Bar	6H596301	6H614301	6H614301
75	Collar (L)	6M039401	6M039401	6M039401
76	Packing (A)	6M084001	6M039501	6M039501
77	Screw (L)	6M036601	6M036601	6M036601
78	Rear Cover	6M085101	6M039601	6M039601
79	Washer (P)	6H595701	6H595701	6H595701
80	Oscillating Gear	6H629101	6J136101	6M036701
81	O-ring (B)	6H770601	6G466001	6G466001
82	Washer (R)	6H129200	6H129200	6H129200
83	Ball Bearing (D)	6G469005	6G469005	6G469005
84	Screw (M)	6G940402	6G940402	6G940402
85	O-ring (C)	6G670501	6G670501	6G670501
86	Washer (S)	63758500	63758500	63758500
87	Ball Bearing (E)	6G467302	6G467302	6G467302
88	O-ring (D)	6J553001	6J553001	6J553001
89	Side Cover	6M173201	6M174001	6M174001
90	Packing (B)	6J130201	6J130201	6J130201
91	Handle Assembly	6M173501	6M173501	6M178701
92	Ball Bearing (F)	6G522706	6G522706	6G522706
93	Bearing Retainer (B)	6G472401	6G472401	6G472401
94	O-ring (E)	6G162401	6G162401	6G162401
95	Handle Screw Cap	6J418102	6J418102	6J418102