



BT II-7000 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	96120003	MAIN BODY	722	96020005	CLICK GEAR WASHER
200	96120007	SIDE PLATE	725	96120046	TRANSMISSION GEAR BUSHING
300	96120010	ROTOR	800	96120047	ANTI-REVERSE/ANTI-RE LEVER
301	96120014	BAIL ARM	800-1	96120048	ANTI-REVERSE/ANTI-RE LEVER
304	96120016	BAIL ARM COVER	801	96120049	ANTI-REVERSE SPRING
305	96120017	KICK LEVER	804	96120050	ANTI-RE LEVER PIN
307	96120020	BAIL HOLDER	808	96120051	RATCHET
309	96120021	BAIL ARM SUPPORT PIN	809	96120052	SILENT SPRING
310	96120022	COMPRESSION SPRING	910-2	96010001	BALL BEARING
313	96120023	BAIL WIRE ASSY.	910-12/910-3	96010002	BALL BEARING
315	96120024	LINE ROTOR	920-1	96020006	WASHER
316	96120025	LINE ROLLER BUSHING	920-2	96020007	WASHER
318	96120026	ROTOR NUT	920-3	96020008	WASHER
400	96120029	SPOOL ASSY.	920-13	96020009	WASHER
405	96050001	DARG WASHER RETAINER	920-16	96020010	WASHER
500	96120032	HANDLE ASSY.	930-1	96030001	SCREW
513	96120035	HANDLE CAP	930-2	96030002	SCREW
515	96020001	HANDLE SCREW CAP WASHER	930-13	96030003	SCREW
600	96120038	DRAG KNOB ASSY	930-26	96030004	SCREW
610	96020002	DRAG WASHER	930-28	96030005	SCREW
611	96020003	EARED WASHER	930-29	96030006	SCREW
612	96020004	KEY WASHER	930-36	96030007	SCREW
700	96120039	DRIVE GEAR	930-3	96030008	SCREW
702	96120040	PINION GEAR	930-4	96030009	SCREW
705	96120041	TRANSMISSION GEAR	930-5	96030010	SCREW
708	96120042	OSCILLATING SLIDER	930-6	96030011	SCREW
716	96120043	OSCILLATION SLIDER PLATE	930-7	96030012	SCREW
718	96120044	MAIN SHAFT	930-8	96030013	SCREW
719	96120045	CLICK GEAR			