


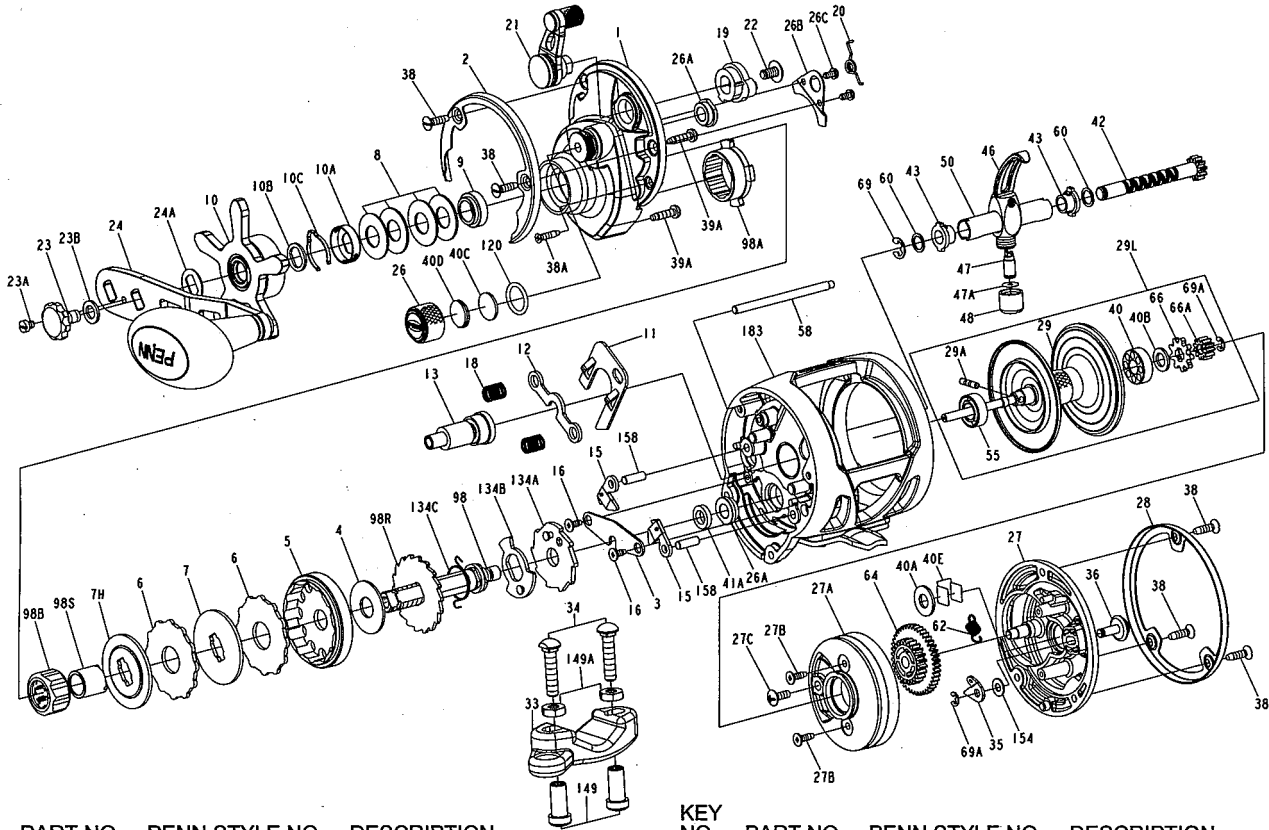

**PARTS LIST FOR WAR15LWLH and WAR20LWLH**  
**REEL ASM. Nos. 1366187(WAR15LWLH)&1366192(WAR20LWLH)**



KEY NO.	PART NO.	PENN STYLE NO.	DESCRIPTION	KEY NO.	PART NO.	PENN STYLE NO.	DESCRIPTION
1	1383088	1-WAR15LWLH	Right Side Plate(15)	35	1383037	35-WAR15LW	Click Tongue
1	1383089	1-WAR20LWLH	Right Side Plate(20)	36	1383038	36-WAR15LW	Click Button
2	1382975	2-WAR15LW	Right Side Ring	38	1383039	38-WAR15LW	Screw (5 req)
3	1384179	3-WAR15LW	Bridge	38A	1383040	38A-WAR15LW	Screw
4	1382976	4-WAR15LW	Drag Washer	39A	1383041	39A-WAR15LW	Screw(2req)
5	1383090	5-WAR15LWLH	Main Gear	40	1383042	40-WAR15LW	Ball Bearing
6	1382978	6-WAR15LW	Tabbed Drag Washer(2 req)	40A	1383043	40A-WAR15LW	Washer
7	1382999	7-WAR15LW	Keyed Metal Drag Washer	40B	1383044	40B-WAR15LW	Felt Washer
7H	1383000	7H-WAR15LW	Heavy Metal Drag Washer	40C	1383045	40C-WAR15LW	Washer, Acetal Thrust
8	1383001	8-WAR15LW	Spring Washer (4 req)	40D	1383046	40D-WAR15LW	Washer, Rubber Thrust
9	1384180	9-WAR15LW	Spacing Sleeve	40E	1383047	40E-WAR15LW	Thrust Washer (2req)
10	1383091	10-WAR15LWLH	Star Drag	41A	1384181	41A-WAR15LW	Bushing
10A	1383003	10A-WAR15LW	Star Click Retainer	42	1383049	42-WAR15LW	Worm Shaft Assembly(15)
10B	1383004	10B-WAR15LW	Star Click Washer	42	1383050	42-WAR20LW	Worm Shaft Assembly(20)
10C	1383005	10C-WAR15LW	Star Click Spring	43	1383051	43-WAR15LW	Worm Shaft Bushing(2req)
11	1383092	11-WAR15LWLH	Eccentric Jack	46	1383052	46-WAR15LW	Line Guide Assembly
12	1383007	12-WAR15LW	Pinion Yoke	47	1383053	47-WAR15LW	Line Guide Pawl
13	1383275	13-WAR15LWLH	Pinion	47A	1383054	47A-WAR15LW	Pawl Shim
15	1383276	15-WAR15LWLH	Anti Reverse Dog(2 req)	48	1383055	48-WAR15LW	Line Guide Nut
16	1383010	16-WAR15LW	Screw (2 req)	50	1383056	50-WAR15LW	Worm Shield(15)
18	1383011	18-WAR15LW	Pinion Yoke Spring (2 req)	50	1383057	50-WAR20LW	Worm Shield(20)
19	1383093	19-WAR15LWLH	Eccentric	55	1451533	55-WAR15LW	Ball Bearing
20	1446771	20-WAR15LWLH	Eccentric Spring	58	1383058	58-WAR15LW	Line Guide Post(15)
21	1383014	21-WAR15LW	Eccentric Lever	58	1383059	58-WAR20LW	Line Guide Post(20)
22	1383015	22-WAR15LW	Eccentric Screw	60	1383060	60-WAR15LW	Worm Shaft Washer(2req)
23	1383016	23-WAR15LW	Handle Assembly Screw	62	1383061	62-WAR15LW	Spring
23A	1383017	23A-WAR15LW	Handle Lock Screw	64	1383062	64-WAR15LW	Idler Gear
23B	1383018	23B-WAR15LW	Handle Screw Washer	66	1383063	66-WAR15LW	Click Ratchet
24	1383019	24-WAR15LW	Handle Assembly	66A	1383064	66A-WAR15LW	Spool Gear
24A	1383020	24A-WAR15LW	Handle Thrust Washer	69	1383065	69-WAR15LW	Retainer Ring
26	1383021	26-WAR15LW	Spool Tension Control Cap	69A	1383066	69A-WAR15LW	Retainer Ring (2 req)
26A	1383022	26A-WAR15LW	Bushing(2req)	98	1383094	98-WAR15LWLH	Main Gear Shaft
26B	1383023	26B-WAR15LW	Clutch Retainer	98A	1383068	98A-WAR15LW	Clutch Housing
26C	1383024	26C-WAR15LW	Screw(2req)	98B	1384182	98B-WAR15LW	Clutch
27	1383277	27-WAR15LWLH	Left Side Plate(15)	98R	1383069	98R-WAR15LW	Anti Reverse Ratchet
27	1383278	27-WAR20LWLH	Left Side Plate(20)	98S	1383070	98S-WAR15LW	Clutch Sleeve
27A	1383027	27A-WAR15LW	Bearing Housing	120	1383071	120-WAR15LW	O-Ring
27B	1383028	27B-WAR15LW	Screw(2req)	134A	1383095	134A-WAR15LWLH	Clutch Recover Plate
27C	1383029	27C-WAR15LW	Screw	134B	1383073	134B-WAR15LW	Clutch Recover Support Plate
28	1383030	28-WAR15LW	Left Side Ring	134C	1383097	134C-WAR15LWLH	Clutch Recover Spring
29	1383031	29-WAR15LW	Spool (15)	149	1184702	149-045	Rod Clamp Nut (2 req)
29	1383032	29-WAR20LW	Spool (20)	149A	1184706	149-200	Hex Nut (2 req)
29A	1451532	29A-WAR15LW	Pin	154	1383077	154-WAR15LW	Click Button Washer
29L	1383033	29L-WAR15LW	Spool Assembly(15)	158	1383078	158-WAR15LW	Dog Pin(2req)
29L	1383034	29L-WAR20LW	Spool Assembly(20)	183	1383279	183-WAR15LWLH	Frame Assembly(15)
33	1182754	33-113	Rod Clamp	183	1383280	183-WAR20LWLH	Frame Assembly(20)
34	1182788	34-045	Screw (2 req)				