


■ EXPLODED VIEW

ДРЕХ 1000/2000/3000/4000

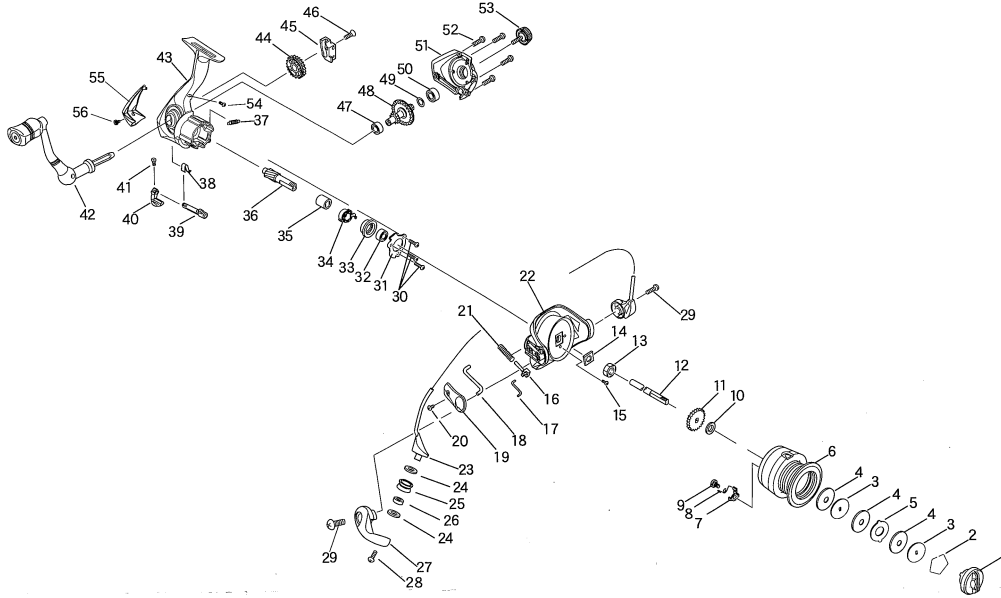


■ PARTS LIST

No.	PART NAME	PART NO.				No.	PART NAME	PART NO.			
		1000	2000	3000	4000			1000	2000	3000	4000
1	Drag Knob Assembly	02322120	02322120	02322120	02322120	30	Screw	20629	20629	20629	20629
2	Stopper Spring	422001	422001	422001	422001	31	Bearing Support	302029	302029	302029	302029
3	Drag Washer	262008	262008	262008	262008	32	Ball Bearing	38049	38049	38049	38049
4	Drag Washer	262001	262001	262001	262001	33	Ball Bearing Collar	172010	172010	172010	172010
5	Drag Washer	262007	262007	262007	262007	34	One Way Clutch Assembly	024407	024407	024407	024407
6	Spool Assembly	02062345	02062346	02062347	02062348	35	Inner Ring	17413	17413	17413	17413
7	Click Claw	33327	33327	33327	33327	36	Pinion Gear	092001	092001	092002	092002
8	Click Claw Spring	67108	67108	67108	67108	37	One Way Clutch Spring	672107	672107	672107	672107
9	Click Claw Screw	202001	202001	202001	202001	38	Anti-Reverse Spring	9406-01-26	9406-01-26	9406-01-26	9406-01-26
10	Click Washer	27453B	27453B	27453B	27453B	39	Anti-Reverse Cam	9406-01-11	9406-01-11	8425-08-02	8425-08-02
11	Click	132013	132013	132013	132013	40	Anti-Reverse Lever	152120	152120	152120	152120
12	Shaft	9406-01-10	9406-01-10	342168	342168	41	Screw	8405-LD-01	8405-LD-01	8405-LD-01	8405-LD-01
13	Nut	18035	18035	18035	18035	42	Handle Assembly	02072002	02072002	02072002	02072002
14	Nut Washer	302001	302001	302001	302001	43	Main Body Assembly	02032135	02032135	02032136	02032136
15	Screw	20662	20662	20662	20662	44	Bull Gear	10474	10474	10488	10488
16	Slider	68513	68513	68513	68513	45	Oscillator	9406-01-09	9406-01-09	9426-01-09	9426-01-09
17	Link	68471	68471	68471	68471	46	Screw	9406-01-22	9406-01-22	20383AB	20383AB
18	Kick Lever	15711	15711	9426-02-07	9426-02-07	47	Ball Bearing	38059	38059	38059	38059
19	Cover A	412151	412151	412152	412152	48	Main Gear	9406-01-07	9406-01-07	9426-01-07	9426-01-07
20	Screw	20629	20629	20629	20629	49	Washer	27290A	27290A	27290A	27290A
21	Dead Point Spring	9406-02-11	9406-02-11	67145	67145	50	Ball Bearing	38049	38049	38049	38049
22	Rotor	052129	052129	052130	052130	51	Side Plate Assembly	02042133	02042133	02042134	02042134
23	Ball Arm Assembly	02052129	02052129	02052130	02052130	52	Screw	8406-LD-01	8406-LD-01	8406-LD-01	8406-LD-01
24	Washer	27704	27704	27704	27704	53	Handle Cap	192106	192106	192106	192106
25	Line Roller	25099	25099	25099	25099	54	Screw	20546	20546	20546	20546
26	Ball Bearing	38248	38248	38248	38248	55	Back Cover	412187	412187	412189	412189
27	Ball Arm Lever	152119	152119	152119	152119	56	Screw	5406-01-05	5406-01-05	5406-01-05	5406-01-05
28	Screw	21165	21165	21165	21165						
29	Screw	20663	20663	20663	20663						

A523-4407-016

■ EXPLODED VIEW

ДРЕХ 5000/6000

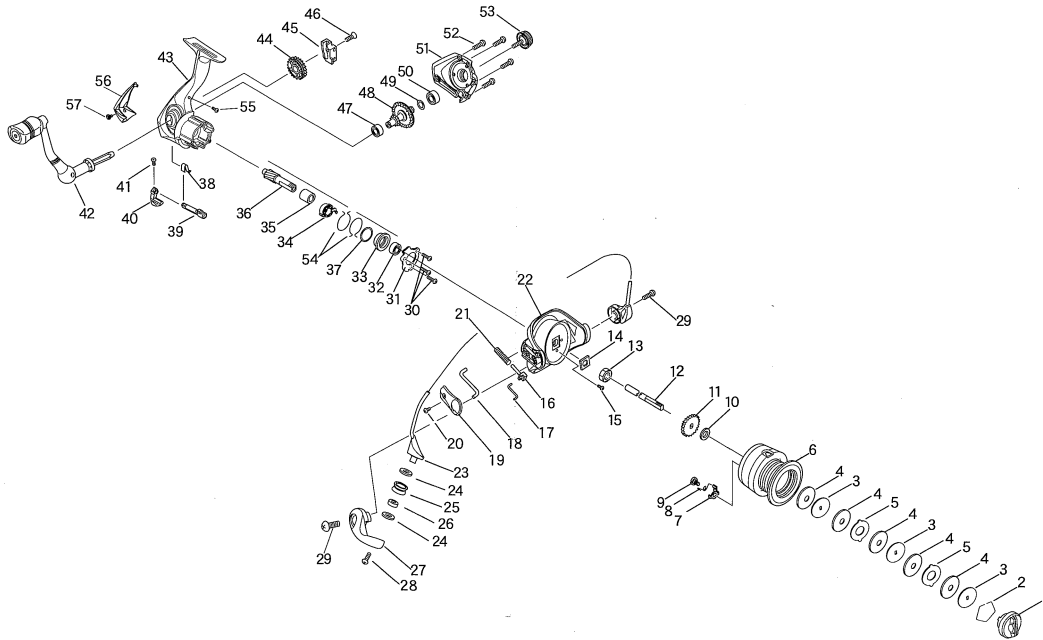

■ PARTS LIST

No.	PART NAME	PART NO.		No.	PART NAME	PART NO.	
		5000	6000			5000	6000
1	Drag Knob Assembly	02322120	02322120	30	Screw	9466-01-26	9466-01-26
2	Stopper Spring	422001	422001	31	Bearing Support	302027	302027
3	Drag Washer	262008	262008	32	Ball Bearing	9446-01-17	9446-01-17
4	Drag Washer	262001	262001	33	Ball Bearing Collar	172011	172011
5	Drag Washer	262007	262007	34	One Way Clutch Assembly	024447	024447
6	Spool Assembly	02062349	02062350	35	Inner Ring	172012	172012
7	Click Claw	33327	33327	36	Pinion Gear	092003	092003
8	Click Claw Spring	67108	67108	37	Washer	9446-01-16	9446-01-16
9	Click Claw Screw	202001	202001	38	Anti-Reverse Spring	9406-01-26	9406-01-26
10	Click Washer	27453B	27453B	39	Anti-Reverse Cam	9446-01-11	9446-01-11
11	Click	132013	132013	40	Anti-Reverse Lever	152120	152120
12	Shaft	342169	342169	41	Screw	8405-LD-01	8405-LD-01
13	Nut	9446-01-14	9446-01-14	42	Handle Assembly	029446-05-01A	029446-05-01A
14	Nut Washer	9446-01-15	9446-01-15	43	Main Body Assembly	02032137	02032137
15	Screw	9446-01-28	9446-01-28	44	Bull Gear	9446-01-08	9446-01-08
16	Slider	68513	68513	45	Oscillator	9446-01-09	9446-01-09
17	Link	9446-02-08	9446-02-08	46	Screw	9446-01-22	9446-01-22
18	Kick Lever	9446-02-07	9446-02-07	47	Ball Bearing	9446-01-18	9446-01-18
19	Cover A	412155	412155	48	Main Gear	9446-01-07	9446-01-07
20	Screw	9466-01-26	9466-01-26	49	Washer	27290A	27290A
21	Dead Point Spring	9446-02-11	9446-02-11	50	Ball Bearing	9446-01-19	9446-01-19
22	Rotor	052131	052131	51	Side Plate Assembly	02042135	02042135
23	Bail Arm Assembly	02292003	02292003	52	Screw	ST2.6*12	ST2.6*12
24	Washer	27704	27704	53	Handle Cap	192106	192106
25	Line Roller	9446-02-10	9446-02-10	54	One Way Clutch Spring	9446-01-21	9446-01-21
26	Ball Bearing	38248	38248	55	Screw	20546	20546
27	Bail Arm Lever	152121	152121	56	Back Cover	412191	412191
28	Screw	21165	21165	57	Screw	5406-01-05	5406-01-05
29	Screw	20663	20663				

A523-4447-016